

# Maximum Control for Controlled Substances

## **CW2 Wall Mount:** Biometrics - PIN - Proximity Card Reader

- Reads Fingerprints / PINs
- Highly Accurate Optical Sensor
- Option for Smart Cards
- Heavy Duty Steel Construction
- 3 Adjustable Shelves
- Built-in TCP/IP, Serial, and USB

**Manufacturer:** ESSC/MedixSafe Inc. Memphis TN U.S.A [MedixSafe.com](http://MedixSafe.com)

**Model Numbers:** There are two model numbers for the **CW2**:  
The **CW2** and the **CW2-HID**.

**Exterior Cabinet Dimensions:** 24" High x 18" Wide x 12" Deep

**Interior Cabinet Dimensions:** 23-7/8" High x 17-7/8" Wide x 11-7/8" Deep

**Weight:** 70 lbs, 83 lbs packaged

**Finish:** Powder Coating

**Color:** Black

**Material:** 10 gauge steel

Locking Mechanism: Single 600 lbs lock

**Voltage:** 12 Volt DC current draw 20mA idle 130mA active

### **Combination Biometrics, PIN Pad and Proximity Card Reader:**


The MedixSafe **CW2** is a truly revolutionary and compact narcotics cabinet. It is equipped with a stand-alone networkable TCP/IP based controller and is designed to require combinations of fingerprint, PIN and/or Proximity Cards to gain access. This allows the **CW2** to store up to 1,500 users and a 50,000 event activity log. The **CW2** can also connect directly to a wireless communication device at 100 Mbps which allows it to have fingerprint additions/deletions and user activity uploaded/downloaded without having to go directly to the ambulance. Hardwiring to an existing network for additional office/storage locations is also an option. **The CW2 cannot be compromised just by watching someone else enter their PIN number!**

**Software:** The MedixSafe **CW2** is an access control solution that is easy to manage from any computer. The software comes with the following features:

1. Interactive embedded help screen
2. Intuitive icons
3. Descriptive, easy-to-understand information
4. Well organized menu and programming for fast setup

**Hardware:** Customers existing PC or lap top.

**Remote Communications:** A TCP/IP connection will need to be provided for remote administration and communication to the **CW2**

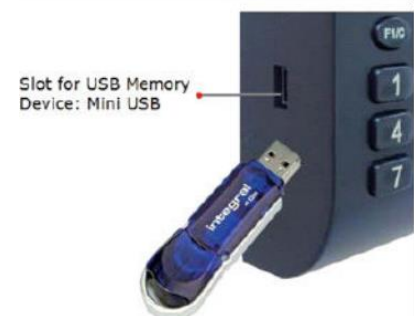

1-855-MEDIXSAFE  
1-855-633-4972



1619 Bartlett Rd.  
Memphis, TN 38134  
[MedixSafe.com](http://MedixSafe.com)